

Hanhart Alpha



- Normal time shows hour, minute, second, AM/PM indicator, month, date and day of the week
- 12/24 hour selectable
- 1/100 of a second up to 30 minutes
1 second increment up to 24 hours
- Alarm with 4 minutes snooze
- Hourly chime

Instruction manual for Stopwatch

TIME/CALENDAR DISPLAY MODE

1. Time display in hour, minute, second and day of week normal time display state
2. Calendar display in month, date, day of week > select with S1
3. Alarm time setting (press S3 to alarm mode)
4. Alarm on/off-hold S2 then press S1 to switch/ Time Display Mode
5. Chime on/off-hold S2 then press S3 to switch. To set time and calendar: press S3 three times, press S2 to select then S1 to adjust (fast forward by pressing S1 for about 2s) select 12/24-hour cycle option when setting normal time hour by forwarding figure to "A"/"P" for 12 hour mode or 24 hour mode, press S3 to return to time display state, press S3 twice to set alarm, press S3 again to return to time display state after setting.

STOPWATCH MODE

This mode counts in 1/100th of a second interval for the first 30 minutes of timing (29min 59.99sec), and in 1 second increment up to a maximum of 24 hours (23hr: 59min:59sec).

To enter stopwatch mode-press S3 at time display state

1. Start/Stop-press S1 to start or stop timing
2. Split (lap) time- press S2 to 'freeze' elapsed time display when counting, press S2 again to resume timing
3. Reset- press S1 to stop the counting then S2 to reset to zero.

Battery: MAXELL AG13 or equivalent, easy opening by screwing the battery cover for replacement.

CHRONOGRAPH FEATURES

1. time/calendar display
2. 24-hour stopwatch
3. alarm
4. hourly chime
5. 12/24-hour mode option

